



K9 HEATER

OPERATING INSTRUCTIONS

The K9 Heater must be properly installed before it is used.

Please read these instructions before using your K9 heater.

Set the thermostat to the desired temperature you wish to have in your dog kennel.

Turning the thermostat knob clockwise will increase the temperature setting of the K9 Heater.

The thermostat has approximate settings which are as follows:-

Minimum - 5°C

Maximum - 30°C

When you turn the thermostat knob clockwise you will hear a faint click. The heater will turn on and run at maximum power until the chosen temperature is reached, the heater will then switch off until the temperature falls below the chosen temperature when it will automatically turn on once more.

When turning on your K9 Heater for the first time you may notice a slight smell, this is from the heating element and is completely normal. This smell should dissipate after a few minutes.

IMPORTANT INFORMATION

Because all dog kennels are different shapes, sizes, have different insulation values, etc, reaching the desired temperature will vary greatly. It is **EXTREMELY** important that your kennel is insulated and preferably has a door or flap. Just as you need to correctly insulate your home and not leave external doors open with your heating on.